


Lift strut attachment mod kit

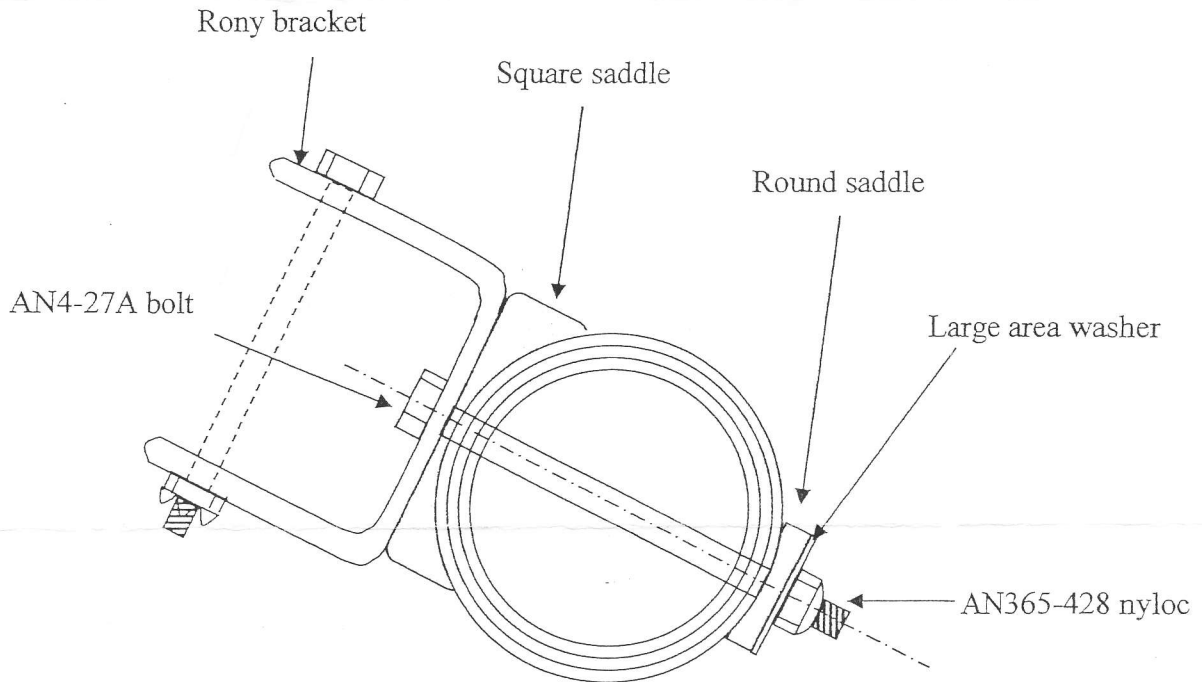

- 4-- 4330-2 square alum. Saddle
- 4-- 4329 round alum. Saddle
- 4-- AN4-27A bolt, 1/4"
- 4-- AN365-428 nyloc nut
- 4-- AN970-4 washer, lg. Area AN 1/4"

Note: There is no torque value with the AN4-27A bolt and nyloc nut. Just snug it down until you feel some pressure. **DO NOT OVERTIGHTEN** as this could compress or distort the longeron. Some slackness may be desired to allow the rony bracket to twist. This will make the installation of the lift struts a little easier. Once lift struts are secured, snug down the nyloc nut.

IMPORTANT. You **MUST** fit all saddles to all 4 lift strut Rony brackets. If not, you may experience some adverse flight characteristics due to un-even wings.